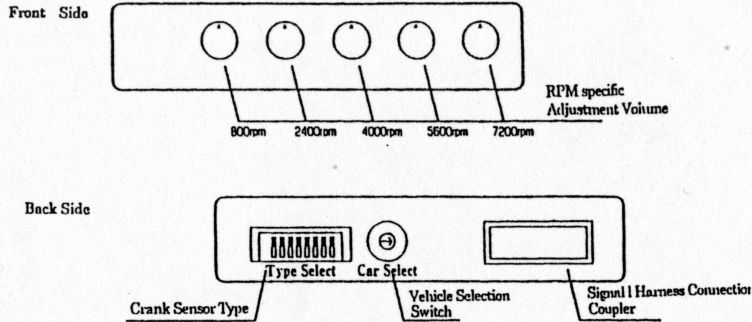


**3**

Part Names

**4**

For the Installer

 
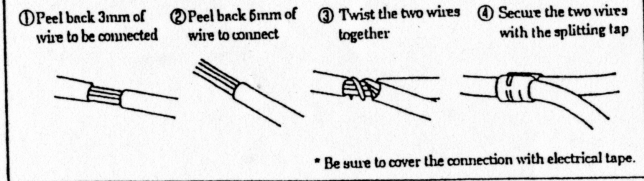
**Warning!**

- Please be sure to disconnect the negative terminal of the battery before installation.
- Please mount the unit in the vehicle approx. 50 cm away from the reach of the driver or at a distance where the driver cannot adjust the unit while the vehicle is in motion.
- Please be sure to secure all unused connectors with electrical tape.

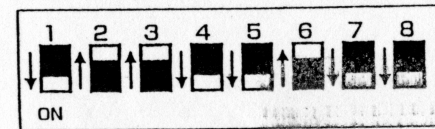
**[1] Installation**

1. Disconnect the negative terminal of the battery
2. Please locate the vehicle ECU location by using the Vehicle Specific ECU Location Diagram and the Vehicle Specific Wiring Diagram
3. While referring to the Vehicle Specific Wiring Diagram connect a connector to each of the signal wires
  - Please use a male fitting on the ECU side of the harness and a female fitting on the vehicle side of the harness
- For NISSAN vehicles, please group two of the same signal wires into one fitting connector.
4. While referring to the Vehicle Specific Wiring Diagram, please connect the red Power (+12V) signal wire. (Please refer to "How to Use the Splitting tap")
  - Be sure to use electrical tape to secure all connections.
5. While referring to the Vehicle Specific Wiring Diagram, please connect the black Ground signal wire. (Please refer to "How to Use the Splitting Taps")
  - Be sure to use electrical tape to secure all connections.

6. While referring to the Vehicle Specific Wiring Diagram, please connect the correct connectors from the signal harness to the connectors from step #3.
  - Please be sure to secure all unused connectors with electrical tape.
7. Reconnection the negative terminal of the battery will complete the installation.

**How to Connect this Connectors****● How to Use the Splitting Taps**

- [2] Please set the Vehicle Specific Selection Switch and Crank Angle Sensor Type Switch on the back side of the unit by referring to the Vehicle Specific Wiring Diagram.

**; Setting the Crank Angle Sensor Type**

Ex : Fairlady Z

**Type Select**

Please slide the switch towards the white mark

- [3] Once the engine has been started, the ignition timing can be adjusted.